



Thank you for your purchase.

Materials needed for this project:

3/4 inch hardwood of choice

#5 scrollsaw blade

1/16 inch drill bit

Finish of choice

1 3/8 Forstner bit (optional)

1- 1 7/16 clock insert

Drill all starter holes (noted grey areas)

Drill forstner hole for clock insert.

Cut all inside pieces first.



Sand as needed.

Glue on base (optional)


Apply finish.

Insert clock insert. p

Cut completely out  
OR  
drill  $\frac{1}{2}$  way down with  $1 \frac{3}{8}$   
forstner bit

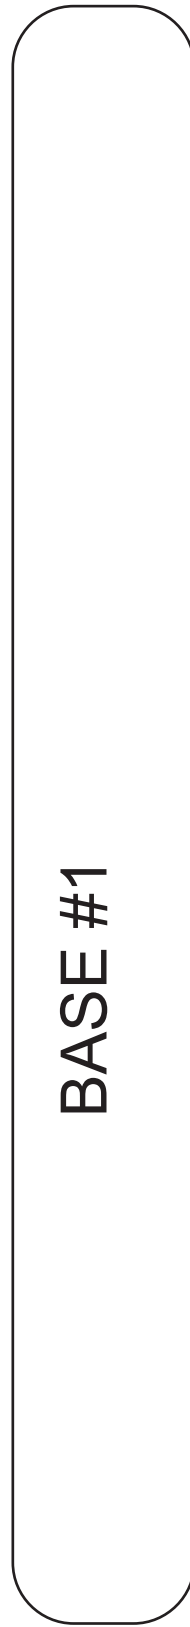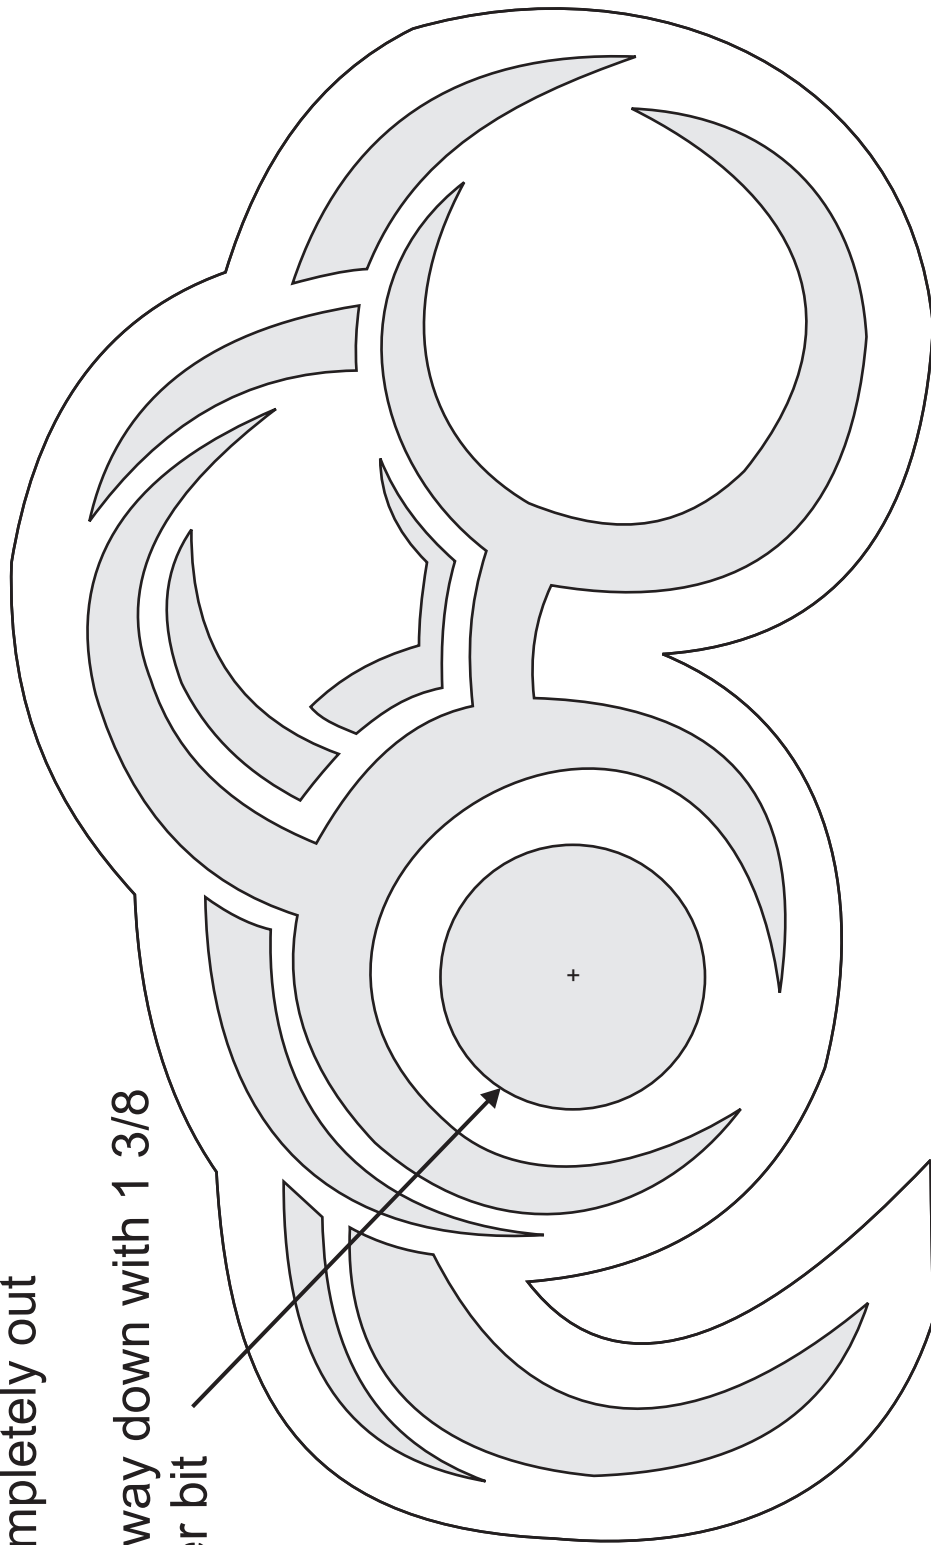

BASE #1

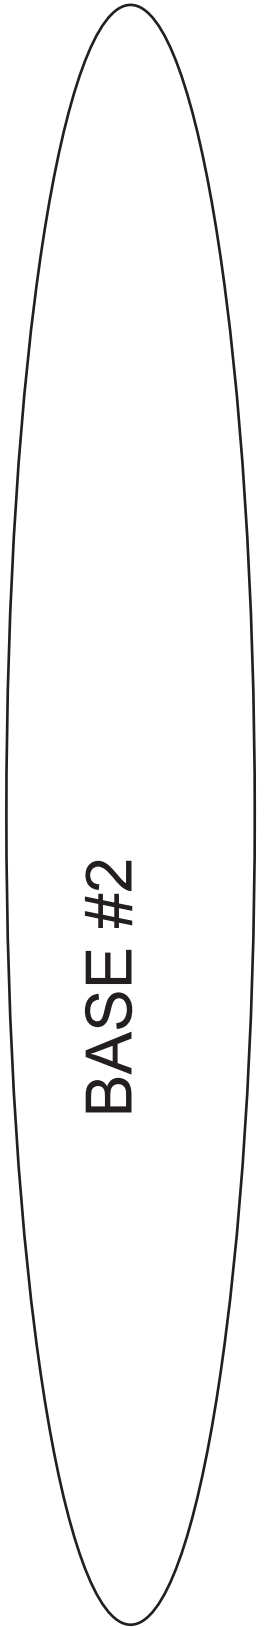

BASE #2