




SCROLLSAWVIDEO

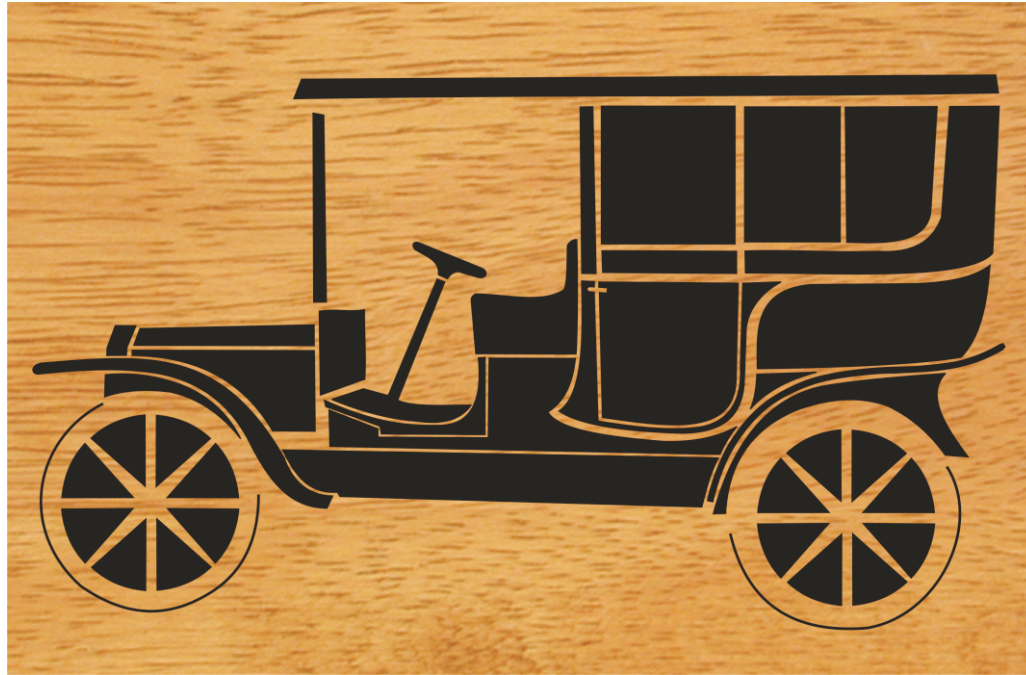

Pattern # 1780 Old Car

Materials needed:

Wood of choice


1/16 Drill bit

#3 to #7 Scrollsaw blade

(depending on wood thickness)

Finish of choice

©TAYCO DESIGNS

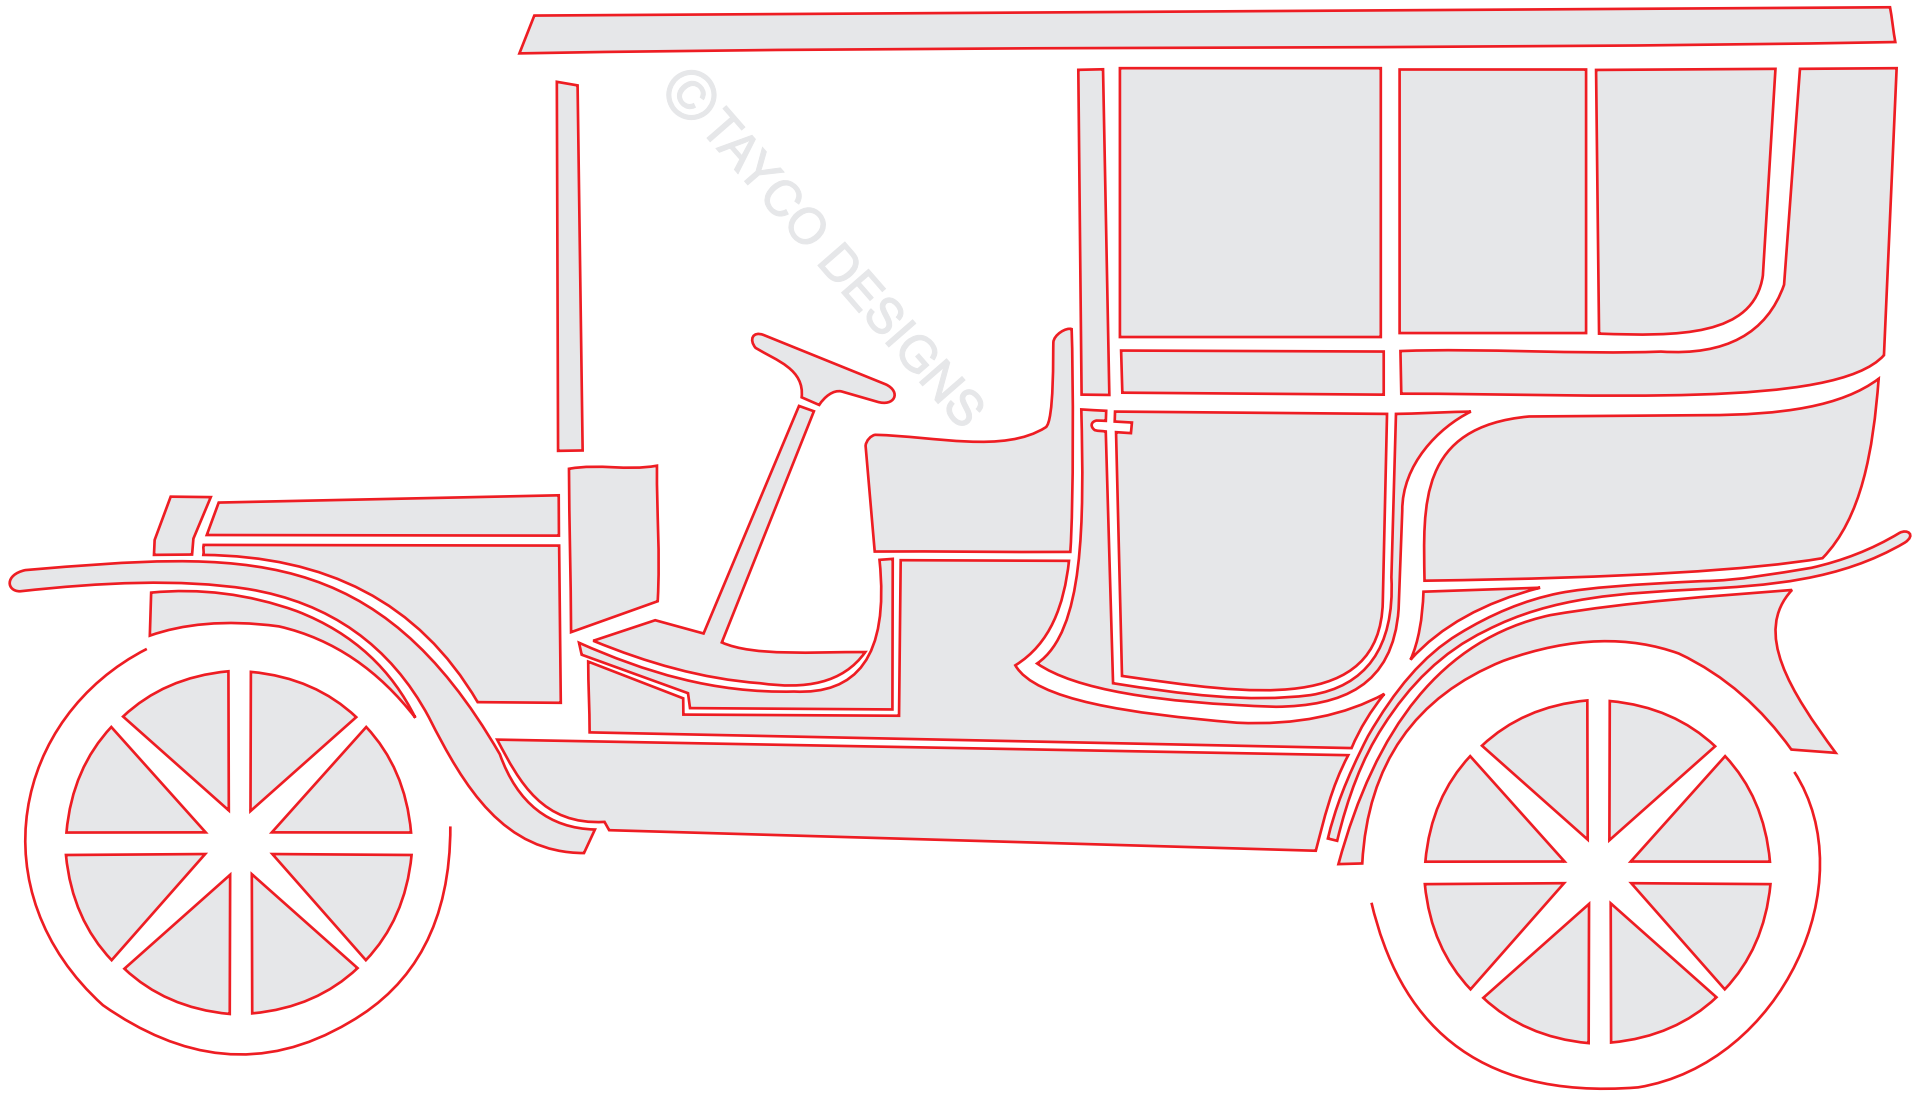

©TAYCO DESIGNS