



SCROLLSAWVIDEO.COM
TAYCO DESIGNS



Pattern # 1035 Mini Clock-Flame

Materials Needed:


3/4 Inch wood to size

1 3/8 Forstner Bit

#5 or #7 Scrollsaw Blade

Finish Of Choice

Mini Clock Insert (1 7/16)

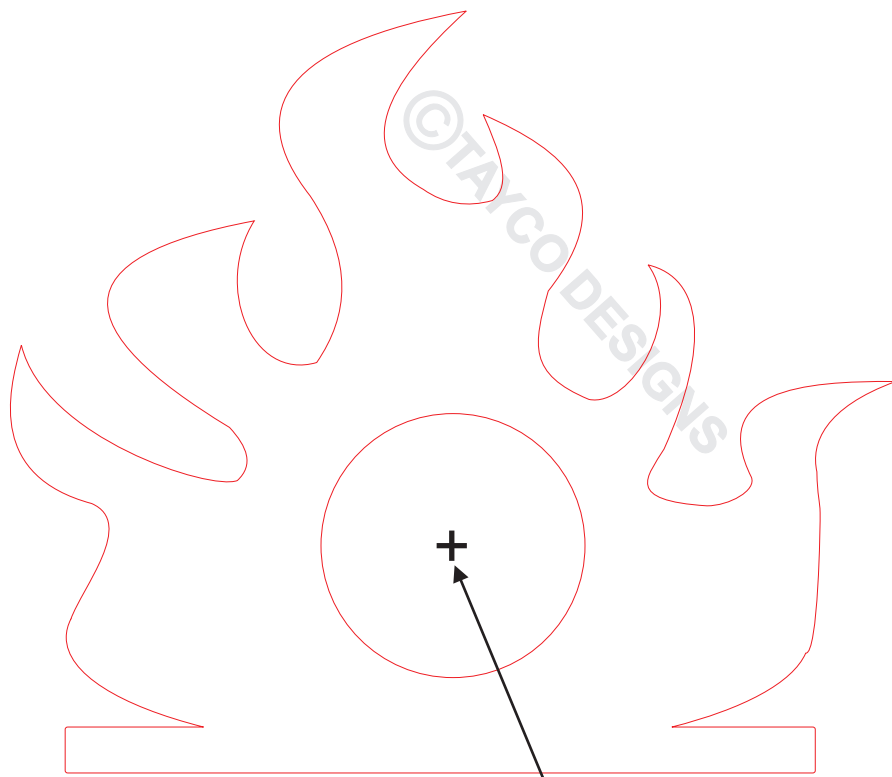

1 3/8 hole
Use Forstner Bit
or
Cut out circle